User guidelines

LEAFIELD litter bins

Vicount Flip top & Open top





Cleaning Products should be flushed with clean water and then washed with a mild detergent solution using a bristle brush or sponge. Care should be taken not to apply undue pressure that may damage labels. Flush clean with water after washing.



Quality Standards All Leafield Environmental products are certificated to BS EN ISO













PPE Always wear appropriate PPE equipment and follow safety guidelines.

Unlocking and removing hood



Insert key and turn clockwise until stop. Lock will pop out and release



Twist bin hood anticlockwise until it stops



Lift top upwards and off bin body


Viscount litter bins can be supplied with either a plastic liner or as sack retention



Removing and replacing metal liner



Grip liner using the two handles

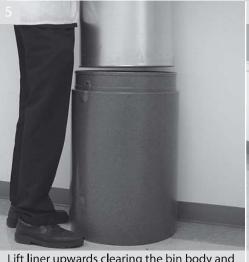

Lift liner upwards clearing the bin body and empty



Using handles to grip replace liner

Sack retention



Drop the liner into the bin gripping the top edge



Stretch sack over bin body keeping liner edge above lip and taught



To remove: pull liner from bin edge gather and remove

Replacing hood and locking



Replace bin hood locating the bayonet and lock



Twist hood clockwise to align hood with body



Push lock in to engage



Post Leafield Way Leafield Industrial Estate Corsham, Wiltshire SN13 9UD





envinfo@leafieldenv.com



