
Installation guidelines **LEAFIELD** litter bins Classic



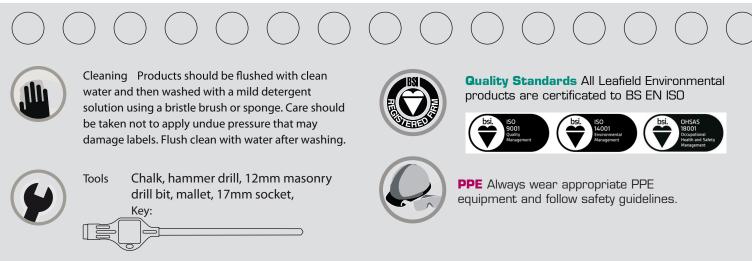

Preparation




Position the ballasting base so that the locking Using chalk, mark the position through the pin faces the direction that the lock on the bin three holes onto the ground bellow will face

Remove ballast cartridge and clearly mark the ground in the three hole positions with a cross

.eafield

environmental

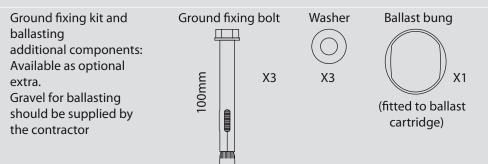

Ground fixing to asphalt is not recommended

Drilling holes and inserting bolts








to a depth of 100mm to accommodate the bolt length, remove debris from holes


Drill 12mm holes in the three marked positionsRe-position the base over the drilled holes. Add Using a mallet drive the bolts home washers to bolts and push through moulded holes in base locating into drilled ground holes

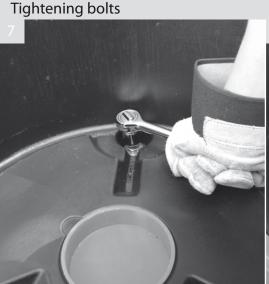

Use a spanner or socket to tighten the bolts



Tighten the bolts to 22.0Nm torque for concrete. Tightening the bolts will fan out the bolt sheath in the hole holding the bolt secure

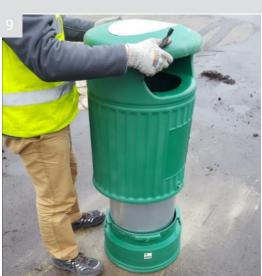

Replace liner and hood. With hood resting on base rotate hood clockwise until it will rotate no further. Push lock in to engage



Remove cap from integral ballasting base and pour gravel into the center



Disperse the gravel equally across the bottom of the base fill until gravel is level with the top of the raised level indicator



Replace liner and hood. With hood resting on base rotate hood clockwise until it will rotate no further. Push lock in to engage



post Leafield Way, Leafield Industrial Estate Corsham, Wiltshire SN13 9UD

telephone

+44 (0)1225 816500



facsimile + 44 (0)1225 816501

website/email www.leafield-environmental.com envinfo@leafieldenv.com

