

Installation guide


Mini Classic



LEAFIELD litter products



Tools Mallet, Power Drill, 12mm Masonry Drill, 17mm socket or spanner, plastic Key (as supplied)

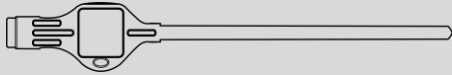

Ground fixing kit - available as an optional extra.

Ground fixing bolt x 3

Washer bolt x 3



Note: Ground fixing to asphalt is not recommended (concrete or paving slab base recommended)



Quality Standards All Leaffield Environmental products are certificated to BS EN ISO



PPE Always wear appropriate PPE equipment and follow safety guidelines.



Cleaning Products should be rinsed with clean water and then washed with a mild detergent solution using a bristle brush or sponge. Care should be taken not to apply undue pressure that may damage labels. Flush clean with water after washing. Non heated pressure washer can be used at no closer the 400mm away from the unit. The Pressure should be no more than 100 Bar.

Drilling holes



Using a hand drill, turn the bin base over and drill through the ground fixing locators as shown.



Turn the base over, remembering to position in the correct orientation. Use the masonry drill to drill though each location hole marking the ground.



Drill 12mm holes in all 3 marked locations. Remove the debris from the holes.



Post
Leaffield Way
Leaffield Industrial Estate
Corsham, Wiltshire SN13 9UD



Telephone
01225 816541
Fax
01225 816501



Email
envinfo@leaffieldenv.com



Website
www.leaffield-environmental.com



Inserting and tightening bolts



4 Re-position the bin over the drilled holes. Add washers to bolts and push through moulded holes locating into drilled ground holes beneath



5 Using a mallet drive the bolts home.



6 Tighten the bolts to 22.0Nm torque for concrete. Tightening the bolts will fan out the bolt sheath in the hole holding the bolt secure.

Assembly



7 Replace liner and hood. With hood resting on base rotate hood clockwise until it will rotate no further. Push lock in to engage



Ballast filling (alternative to bolt down fixing)



1 Remove the ballast from the bottom of the bin. Remove the plug and fill with a suitable material.



2 Spread the ballast material by hand or by tipping the base in order to reinsert ballast plug as shown.



3 Replace liner and hood. With hood resting on base rotate hood clockwise until it will rotate no further. Push lock in to engage



Post

Leafield Way
Leafield Industrial Estate
Corsham, Wiltshire SN13 9UD



Telephone

01225 816541
Fax
01225 816501



Email

envinfo@leafieldenv.com



Website

www.leafield-
environmental.com

